Inside mount

Within the window frame

Placement illustrations; use actual hardware to locate fixings.


For Cove Express, Elite and 2-Inch Cordless Wood Blinds supplied with box end brackets and opening front flaps. The top metal rail is the headrail. Mounting brackets and screws come with your blind. Select fixings appropriate for the surface; the supplied screws may not suit every wall or frame.

Set out a tape measure, pencil, level, screwdriver and drill. Choose any drill bit to suit the fixings you will use.

Check whether your valance clips must be fitted before the rail. If extra supports are supplied and their positions are unclear, ask Cove before fixing them.

1 Find a clear position.


Hold the top metal rail within the opening. Leave room for the window and its handles to work without touching the blind.

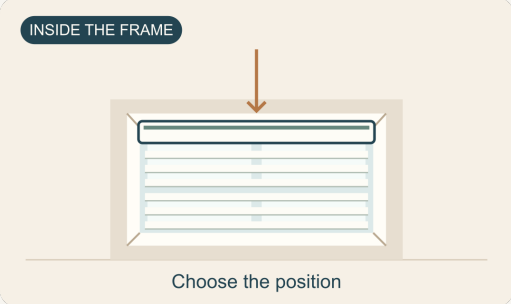

Choose the position

2 Transfer the fixing points.


Offer each end bracket to the rail. Use the same setback on both sides and pencil-mark the bracket holes suitable for your frame.

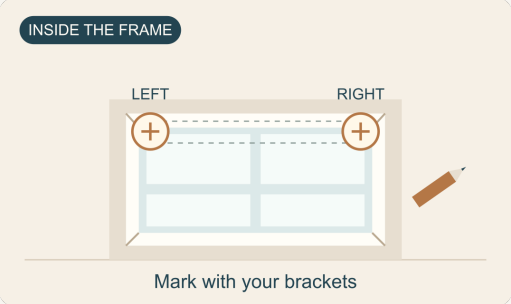

Mark with your brackets

3 Make the supports secure.


Set the blind aside. Fix the brackets to the frame using suitable fixings, with both rail seats aligned and level.

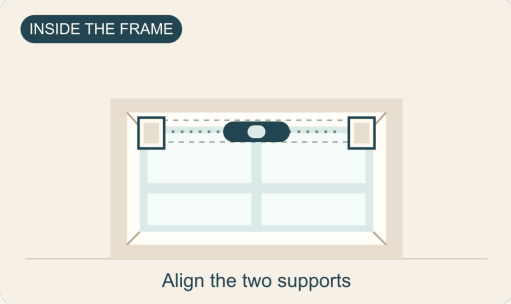

Align the two supports

4 Fit the rail and close the fronts.

Support the blind as its rail enters the open brackets. Close each front flap and check that both ends retain the rail.

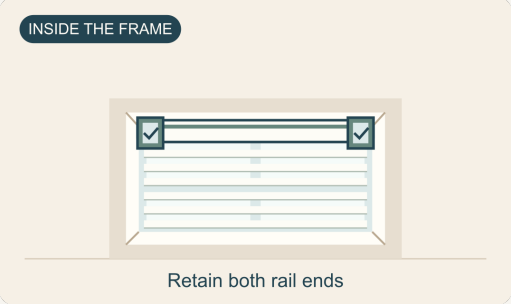

Retain both rail ends

Check the finished fit.

Fit the decorative front cover with its matching clips. Make a gentle operation check: the rail should stay supported and the slats should move without catching.

If the rail is loose or a front flap will not secure, stop and ask Cove for help.

678-549-9503 | coveblinds@gmail.com

Outside mount

On the wall or trim

Placement illustrations; use actual hardware to locate fixings.


For Cove Express, Elite and 2-Inch Cordless Wood Blinds supplied with box end brackets and opening front flaps. The top metal rail is the headrail. Mounting brackets and screws come with your blind. Select fixings appropriate for the surface; the supplied screws may not suit every wall or frame.

Set out a tape measure, pencil, level, screwdriver and drill. Choose any drill bit to suit the fixings you will use.

Check whether your valance clips must be fitted before the rail. If extra supports are supplied and their positions are unclear, ask Cove before fixing them.

1 Set the coverage.


Hold the rail above the opening on the wall or trim. Center the blind where you want coverage and check for handle clearance.

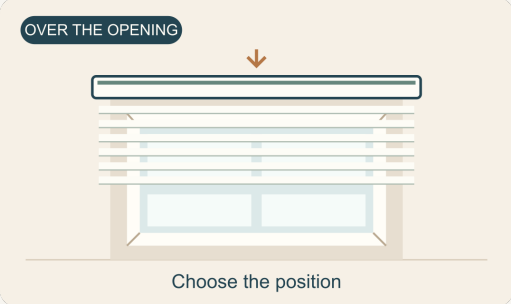

Choose the position

2 Transfer the fixing points.


Use the rail ends to locate the two end brackets. Mark their fixing points after checking alignment and space for the front cover.

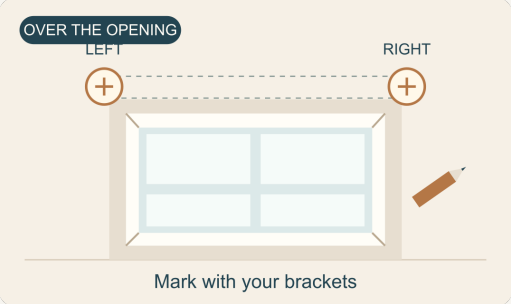

Mark with your brackets

3 Make the supports secure.


Set the blind aside. Attach the brackets to sound wall or trim with suitable fixings. Their rail seats must line up level.

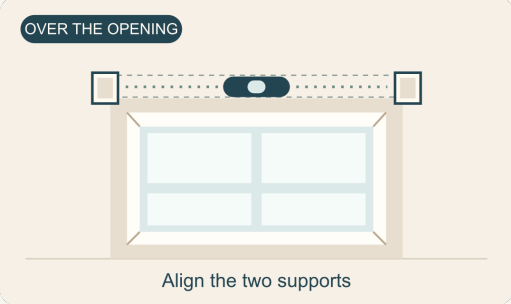

Align the two supports

4 Fit the rail and close the fronts.

Support the blind as its rail enters the open brackets. Close each front flap and check that both ends retain the rail.

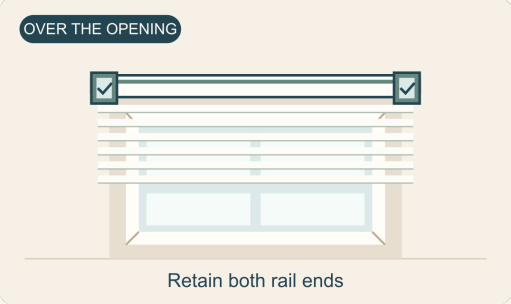

Retain both rail ends

Check the finished fit.

Fit the decorative front cover with its matching clips. Make a gentle operation check: the rail should stay supported and the slats should move without catching.

If the rail is loose or a front flap will not secure, stop and ask Cove for help.

678-549-9503 | coveblinds@gmail.com